 



User Manual

PORTABLE BLUETOOTH SPEAKER

RY-BS010

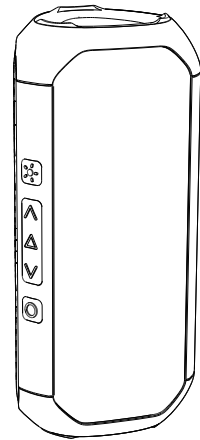

 What's in the Box



Bluetooth Speaker x1



 
Type-C Charging Cable x1



User Manual x1

Product Diagram

- ① Light Control
- ② Volume + / Next Track
- ③ Play / Pause
- ④ Volume - / Previous Track
- ⑤ Power On / Off & Mode Switch
- ⑥ Reset Port
- ⑦ TF Card Port
- ⑧ Aux Port
- ⑨ Charging Port
- ⑩ Charging Indicator

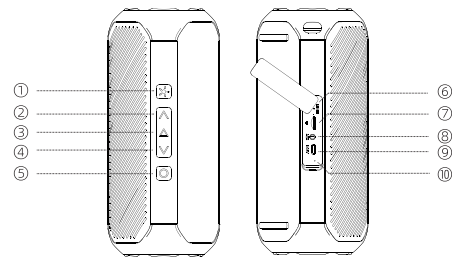

Button Control

Single button

Button	Status	Operation	Function
⏻		Press and hold for 3s	Power on/off
		Press	Switch among Bluetooth / Aux-in/TF mode
⏮	🎵	Press	Volume +/-
		Press and hold for 3s	Next/Previous track
⏸	🎵	Press	Play/Pause
		Press x1	Answer/Hung up call
📞	📞	Press and hold for 3s	Reject call
		Press x2	Dial the last call
📶	📶	Press x1	Light mode switch
		Press x2	Light on/off

Double button

Button	Status	Operation	Function
⏮ And ⏭	Pairing	Press at the same time	Disconnect
		Press at the same time	Connect to the last paired device
		Press and hold for 3s at the same time	Clear paired devices

Getting Started

 
 
Power on

- ⏻ Press and hold for 3s

The voice prompt of connection will be heard. (The default mode is Bluetooth mode with no AUX cable and TF card access)

The light will be multicolor slowly changing once powered on.


Connect via Bluetooth

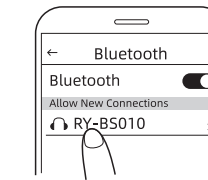

1. Enable Bluetooth on your device and search for pairing.
2. Select RY-BS010 on the Bluetooth list.
3. Once paired, you can see the connected status on your device and light will change.

Disconnect, reconnect and memory clear: see Button control

 Connect via Aux cable




When Aux cable is inserted, the speaker will automatically switch to Aux mode and voice prompt will be heard.

When using the Aux mode, control audio playback via the **connected device**.

- ⏻ Press to switch to other modes

 Connect via TF card



When TF card is inserted, the speaker will automatically switch to TF mode and voice prompt will be heard.

When using the TF mode, control audio playback via the **speaker**.


- ⏻ Press to switch to other modes

Note: The last inserted device takes precedence as the playback source (Aux & TF).

Light Mode

No.	Mode	Status
①	Slowly changing multicolor light	- When the speaker is not connected to any device - Default
②	Circling light	-When the speaker is connected to the device -Switch through the light button in turn Note: Some of these modes will only be activated when music is playing
③	Energy light	
④	Flashing light	
⑤	Breathing light	
⑥	Mono-color rhythm (central radiation)	
⑦	Multi-color rhythm (central radiation)	
⑧	Mono-color rhythm (bottom up)	
⑨	Multi-color rhythm (bottom up)	

 Charging Precautions



Indicator	Status
Red light on	Charging
Red light off	Fully charged

To preserve battery lifespan, fully charge at least once every 45 days.

Specification

Model	RY-BS010
Bluetooth Version	5.0
Bluetooth Range	≥10m
Playtime	Up to 16H(varies by volume and light status)
Connection	Bluetooth/Aux-in/TF card
Battery	4000mAh
Output	24W
Power Input	DC 5V=2A
Charging Time	≤4H
Frequency Range	50Hz-20kHz
Distortion	≤1%
Speaker Size	φ57mm
Product Size	228*103*97mm
Product Weight	928g

Warning

Do NOT drop, hit or shake the device.
Do NOT disassemble, repair or modify the speaker.
Do NOT use cleaning products that contain benzene, solvents or alcohol.
Do NOT expose the speaker to excessive heat or direct sunlight for prolonged periods of time.
Do NOT store the device in a place with high humidity or dust.
Do NOT place heavy objects on top of the speaker.
Do NOT use the speaker near a microwave oven or wireless LAN products.

Trouble Shooting

Trouble	Solutions
No sound	<ul style="list-style-type: none"> • Please set RY-BS010 as the default playback device. • Turn up the volume on your speaker, and on your device/music source. • Try a different music source. • Pair a different device.
Speaker does not pair with the phone	<ul style="list-style-type: none"> • On your mobile device, turn the Bluetooth feature off and on. Remove the speaker from the Bluetooth list and pair again. • Clear all the paired devices from the Rythflo speaker and pair again. • Pair a different device. • Reset your speaker by the reset port.
Battery does not charge	<ul style="list-style-type: none"> • Make sure you are using a USB cable provided by Rythflo or from the qualified manufacturer. • Use a different adapter.
No sound from a cabled device	<ul style="list-style-type: none"> • Make sure your mobile device is on and playing audio • Turn up the volume on the speaker and device. • Make sure the device is properly connected through the cable. • Try using a different 3.5mm Aux cable. • Try connecting to a different device.
Can't turn off the speaker/speaker auto power off	<ul style="list-style-type: none"> • Use the needle to press the reset port. • Contact Rythflo customer service at support@rythflo.co to get technical support.

Trouble	Solutions
Poor sound quality /Static noise	<ul style="list-style-type: none"> • Try using a different music source. • Try pairing a different device. • Turn up the volume on device. • Check the device's audio settings. • Charge your speakers until fully charged.

FCC Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference.
(2) This device must withstand any interference received, including interference that may cause undesired operation.



Manufacturer

Shenzhen Hanke Technology Co.,Ltd
Meipeng SKY311, No.3 Hebei Industrial Zone, Zhongxing Road, Ma'antang Community, Bantian Street, Longgang District, Shenzhen, Guangdong, China, 518000

Warranty & Service

This product is covered with Rythflo product and labor warranty for 12 months from the date of its original purchase.

Please contact us if you have any questions:
support@rythflo.co

